TOP AND CABINET PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

AUTOMATIC
WASHER

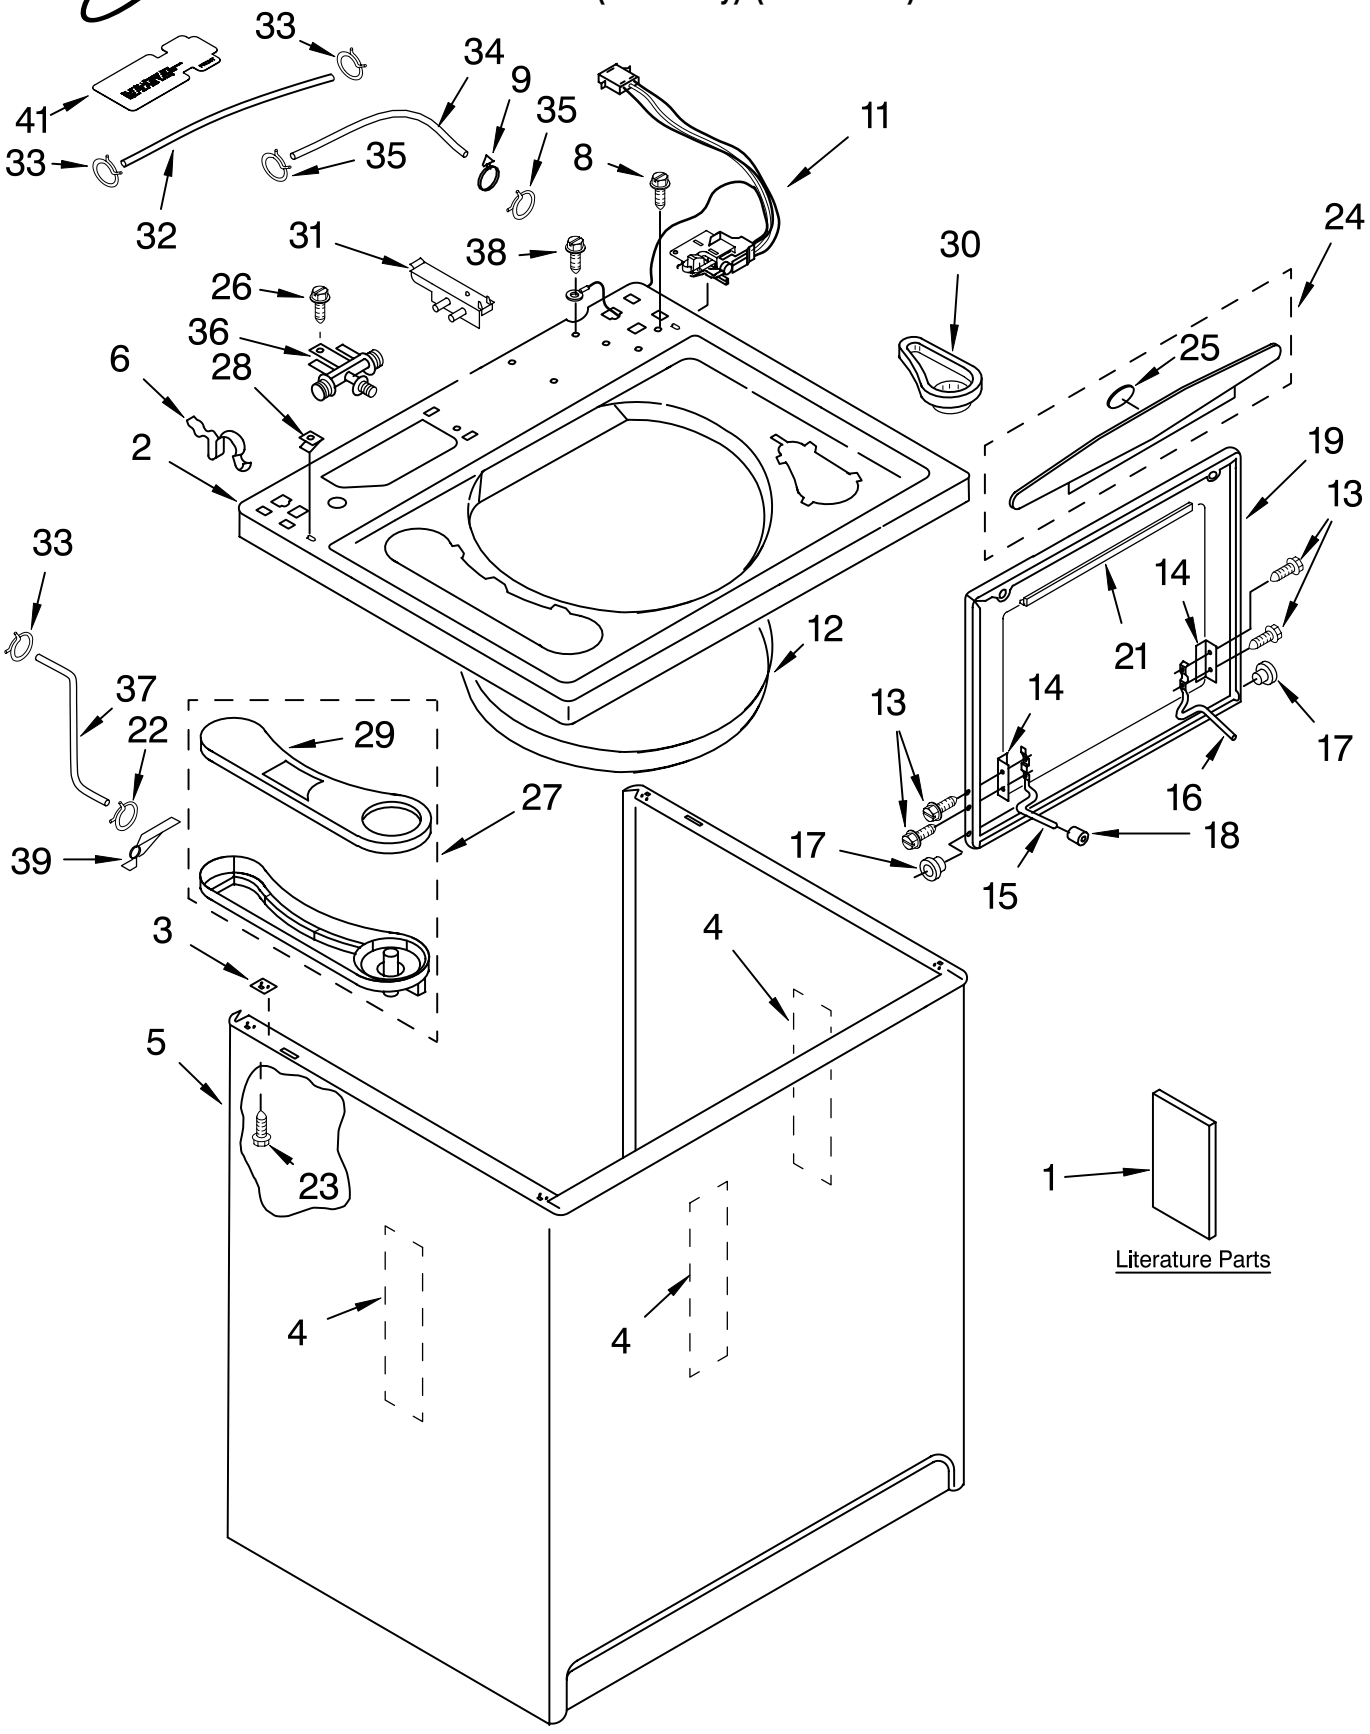

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CABINET PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT3956025	Installation Instructions
	LIT3955876	Use & Care Guide
	LIT8558794	Wiring Diagram
	LIT3956914	Energy Guide

Following May Be Purchased

DO−IT−YOURSELF REPAIR MANUALS

	LIT4313896	Manual (Washer) Do−It−Yourself
2		Top
	8274365	White
	8274367	Biscuit
3	62750	Spacer, Cabinet To Top
4	3976348	Cabinet−Sound Damper
5		Cabinet
	63424	White
	3954357	Biscuit
6	62780	Clip, Top & Cabinet & Rear Panel (2)
8	3400611	Screw, Lid Switch
9	3352501	Restraint, Hose
11	8054980	Switch, Lid
12	8271956	Splash Shield Assembly
13	355274	Screw, Lid Hinge Mounting (4)
14	21097	Pad, Hinge
15	8055257	Hinge, Lid (Left)
16	8055256	Hinge, Lid (Right)
17	8319539	Bearing, Lid Hinge (2)
18	19119	Bumper, Lid Hinge
19		Lid
	3957095	White
	3957096	Biscuit
21	8054939	Seal, Lid
22	371505	Clamp, Hose
23	3390631	Screw, 10−16 X 3/8
24		Handle, Lid
	3956012	Silver
	3956011	Biscuit
25	3956010	Insert, Handle
26	3357011	Screw, 10−16 x 1/2
27	8055237	Dispenser, Bleach & Fabric Softener
28	357213	Nut, Push−In
29	8272009	Cover, Dispenser
30	8055238	Dispenser, Detergent
31	8055243	Connector, 2−Port
32	8055266	Hose, Fabric Softener
33	371506	Clamp, Hose
34	8055267	Hose, Detergent
35	301958	Clamp, Hose
36	8272010	Connector, Venturi
37	8283537	Hose, Bleach
38	3400073	Screw, Ground
39	8271943	Restraint
41	8541605	Cover, Access

REAR PANEL PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

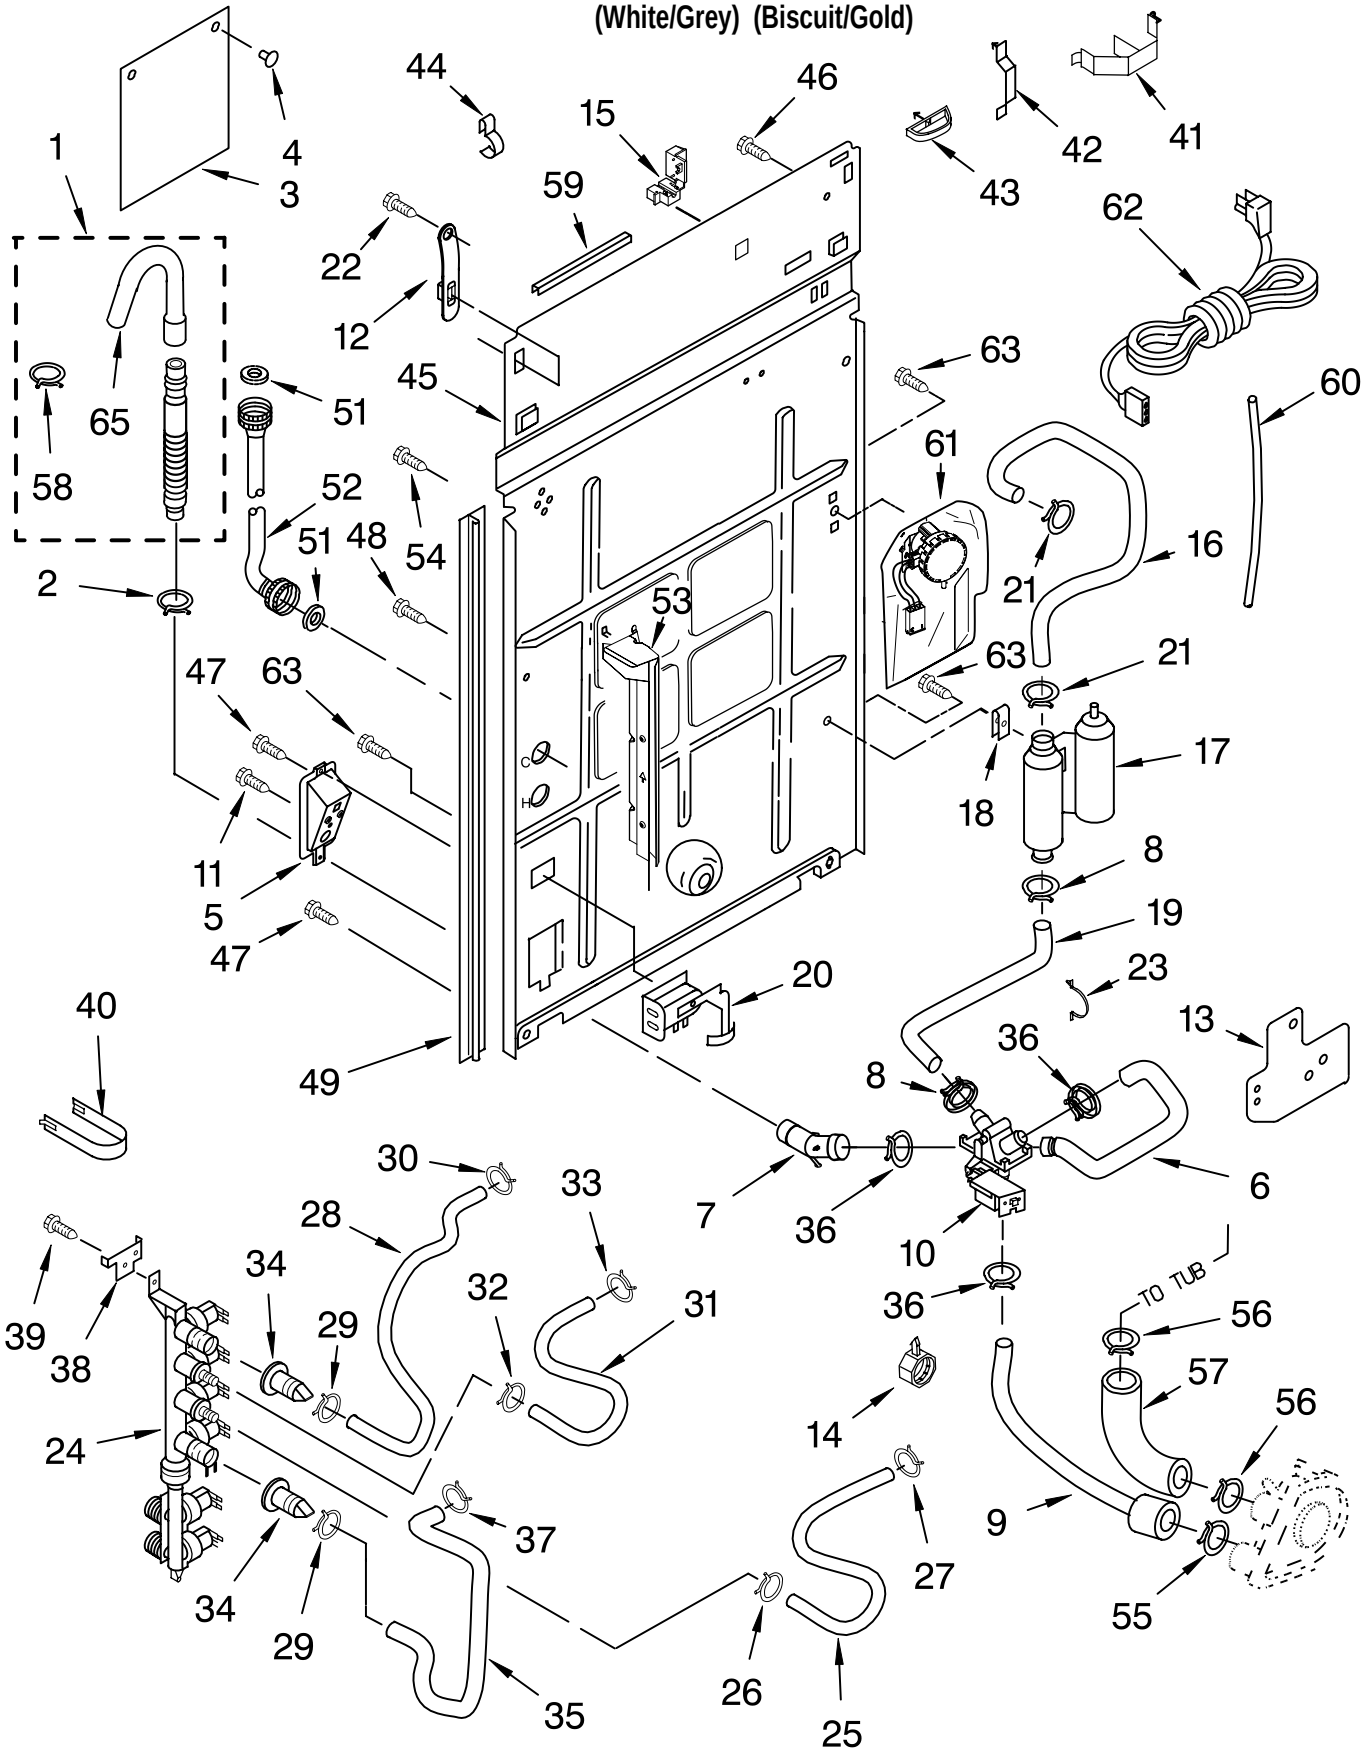

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REAR PANEL PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	3951609	Hose, Drain (4 ft.)
	661577	Hose, Drain (9 ft.) (Not Included.)
	3357090	Extension, Drain Hose (21 Inches) (Not Included.)
2	3366912	Clamp, Hose
3	8282565	Drape, Rear Panel
4	8282566	Clip, Drape
5	3976335	Bracket, Valve Mtg
6	8317908	Hose, 2−Way Valve To Drain
7	3976337	Connector, Hose
8	370445	Hose, Clamp
9	8317907	Hose, Pump to 2−Way Valve
10	3358559	Valve, 2−Way
11	3352299	Screw
12	8318255	Strap, Console (2)
13	3948552	Shield, 2−Way
14	3976395	Clamp, Hose
15	3952821	Relief, Strain (Power Cord)
16	8055233	Hose, Airdome
17	8317889	Airdome Assembly
18	98084	Clip, Airdome
19	8054709	Hose, 2−Way Valve to Airdome
20	8283252	Switch, Kickout
21	3363365	Clamp, Hose
22	90767	Screw, Strap To Console
23	8054659	Clip, Hose (2) (Recirculating)
24	8542063	Valve, Inlet
25	8271982	Hose, Detergent
26	8318490	Clamp, Hose
27	8318492	Clamp, Hose
28	8271984	Hose, Bleach
29	8318493	Clamp, Hose
30	8318494	Clamp, Hose
31	8271983	Hose, Fabric Softener
32	8318491	Clamp, Hose
33	8318495	Clamp, Hose
34	8055306	Check Valve, Duck Bill
35	8318496	Hose, Fresh Fill
36	370449	Clamp, Drain Hose
37	8318497	Clamp, Hose
38	8271909	Bracket, Valve
39	8318499	Screw
40	8272128	Restraint, Hose
41	8055003	Clip, Harness & Pressure Hose
42	8054658	Clip, Harness
43	3352944	Clip, Push−In
44	3347812	Clip, Harness
45	8282493	Panel, Rear
46	3351614	Screw, Ground
47	62863	Screw, 10−16 x 3/8
48	693995	Screw, 8−18 x 3/8
49	62747	Pad, Rear Panel (2)
51	3976300	Washer, Inlet Hose
52		Hose, Water Inlet
	3949374	Blue Coupler
	3949375	Red Coupler
53	8543414	Shield, Upper Valve
54	9740848	Screw, 8−18 x 1/2
55	8317496	Clamp, Hose
56	371504	Clamp, Hose
57	8055063	Hose, Tub to Pump
58	3366913	Clamp, Hose
59	303294	Edge Protector
60	3347781	Hose, Airdome To Pressure Switch
61	8545900	Switch, Pressure Assembly (Includes Mounting Bracket, Jumper Harness, And Shield)
62	661661	Cord, Power (Includes Item 15)
63	3387485	Screw, 10−16 x 5/8
65	3357027	Nozzle, Drain Hose

AGITATOR, BASKET AND TUB PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

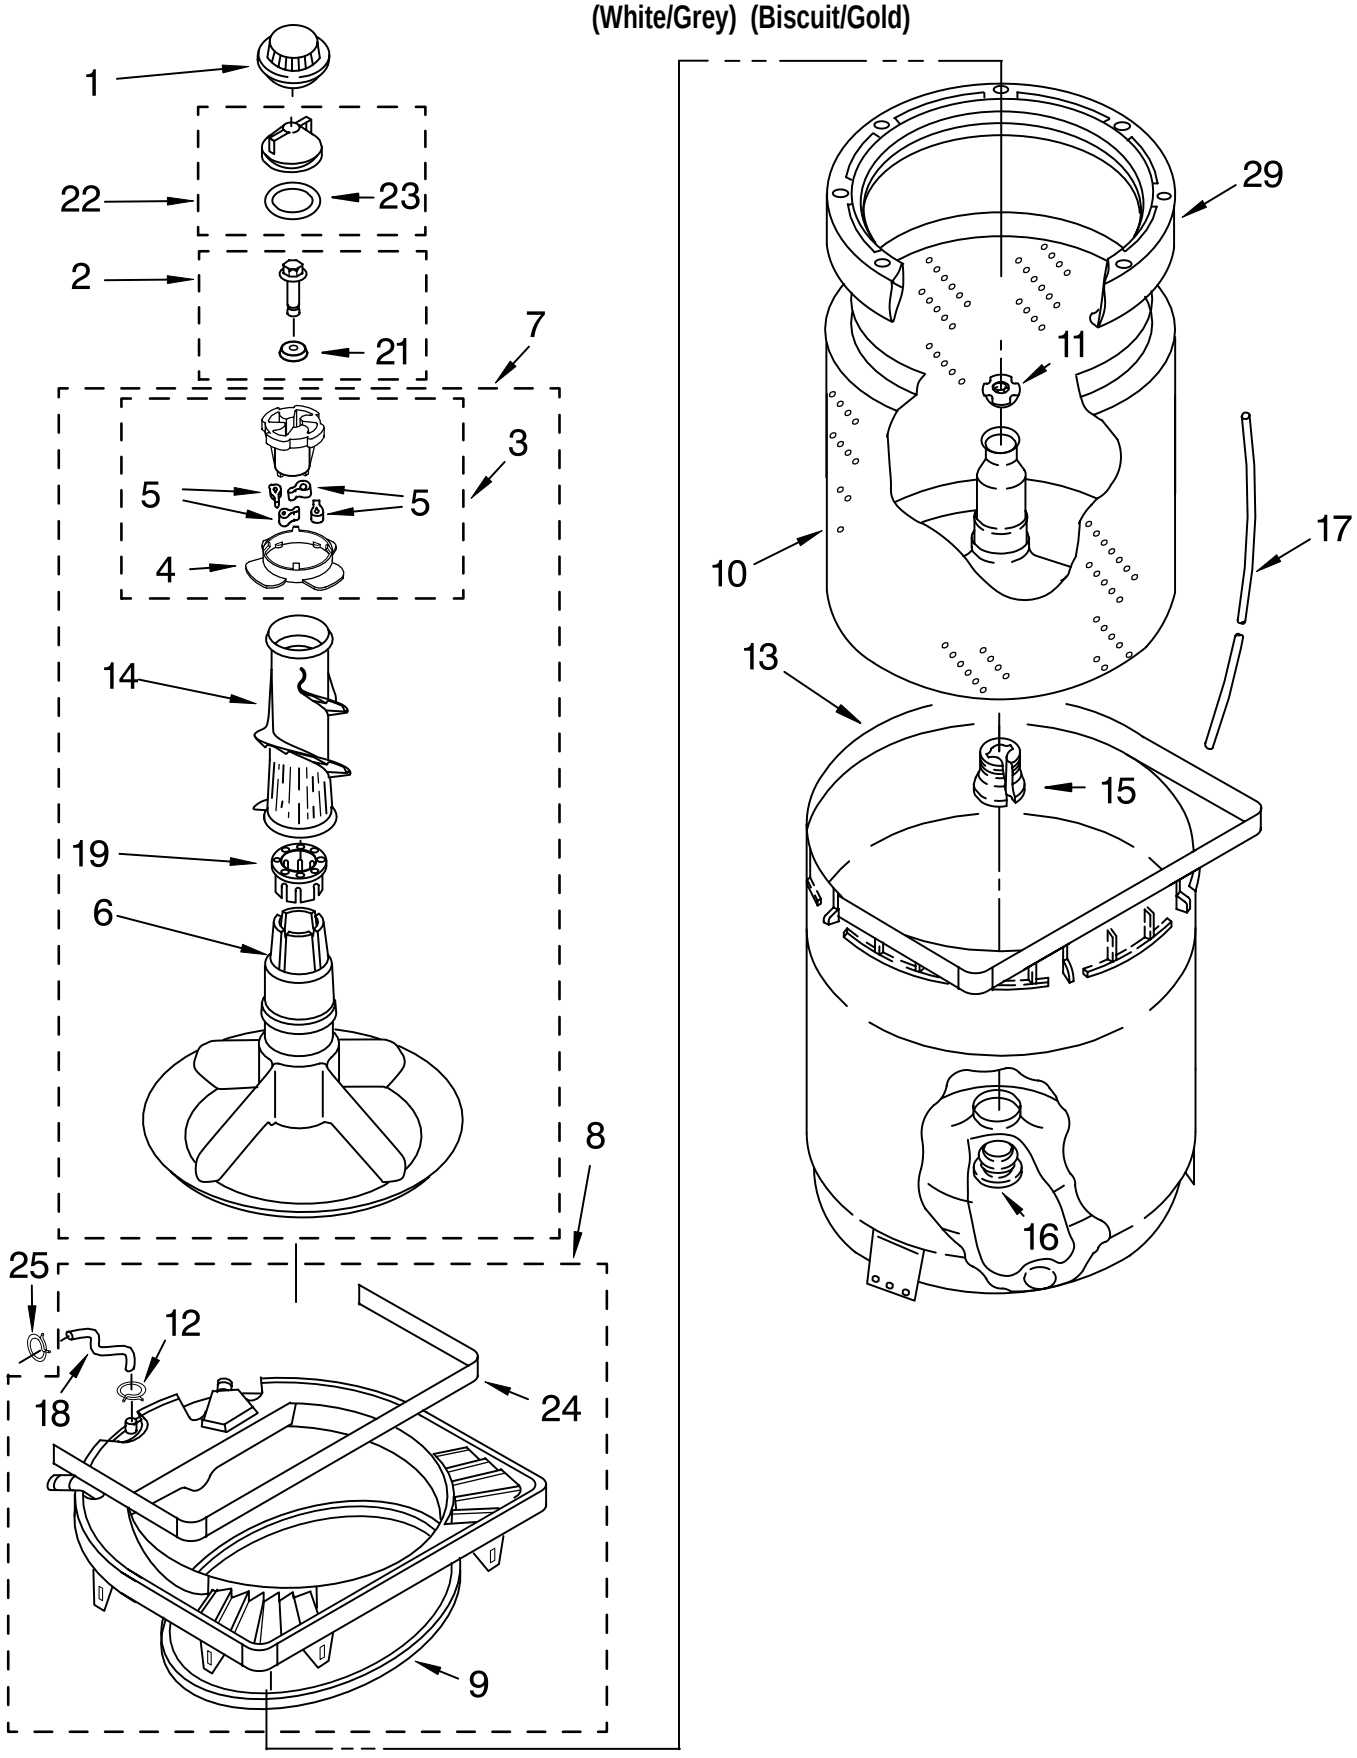

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	3355758	Cap, Agitator
2	358237	Screw & Washer
3	3951682	Cam−Driven
4	3952374	Bearing−Driven Cam
5	3366877	Dog−Agitator
6	3951632	Agitator
7	3951744	Agitator Assembly (Complete)
8	8054686	Tub Ring Assembly
9	8054355	Seal, Tub Ring
10	3951984	Basket
11	21366	Nut, Spanner
12	301958	Clamp, Hose
13	8055061	Tub
14	3363003	Clothes Mover
15	389140	Block, Basket Drive
16	383727	Gasket, Centerpost
17	3347780	Hose, Pressure Switch
18	8526793	Hose, Bleach Outlet
19	3951608	Spacer−Thrust
21	3949550	Washer
22	3354733	Cap, Barrier
23	3348855	Seal, Inner Cap
24	8055082	Shield, Splash
25	3955674	Clamp, Hose
29	8271897	Balance Ring

BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

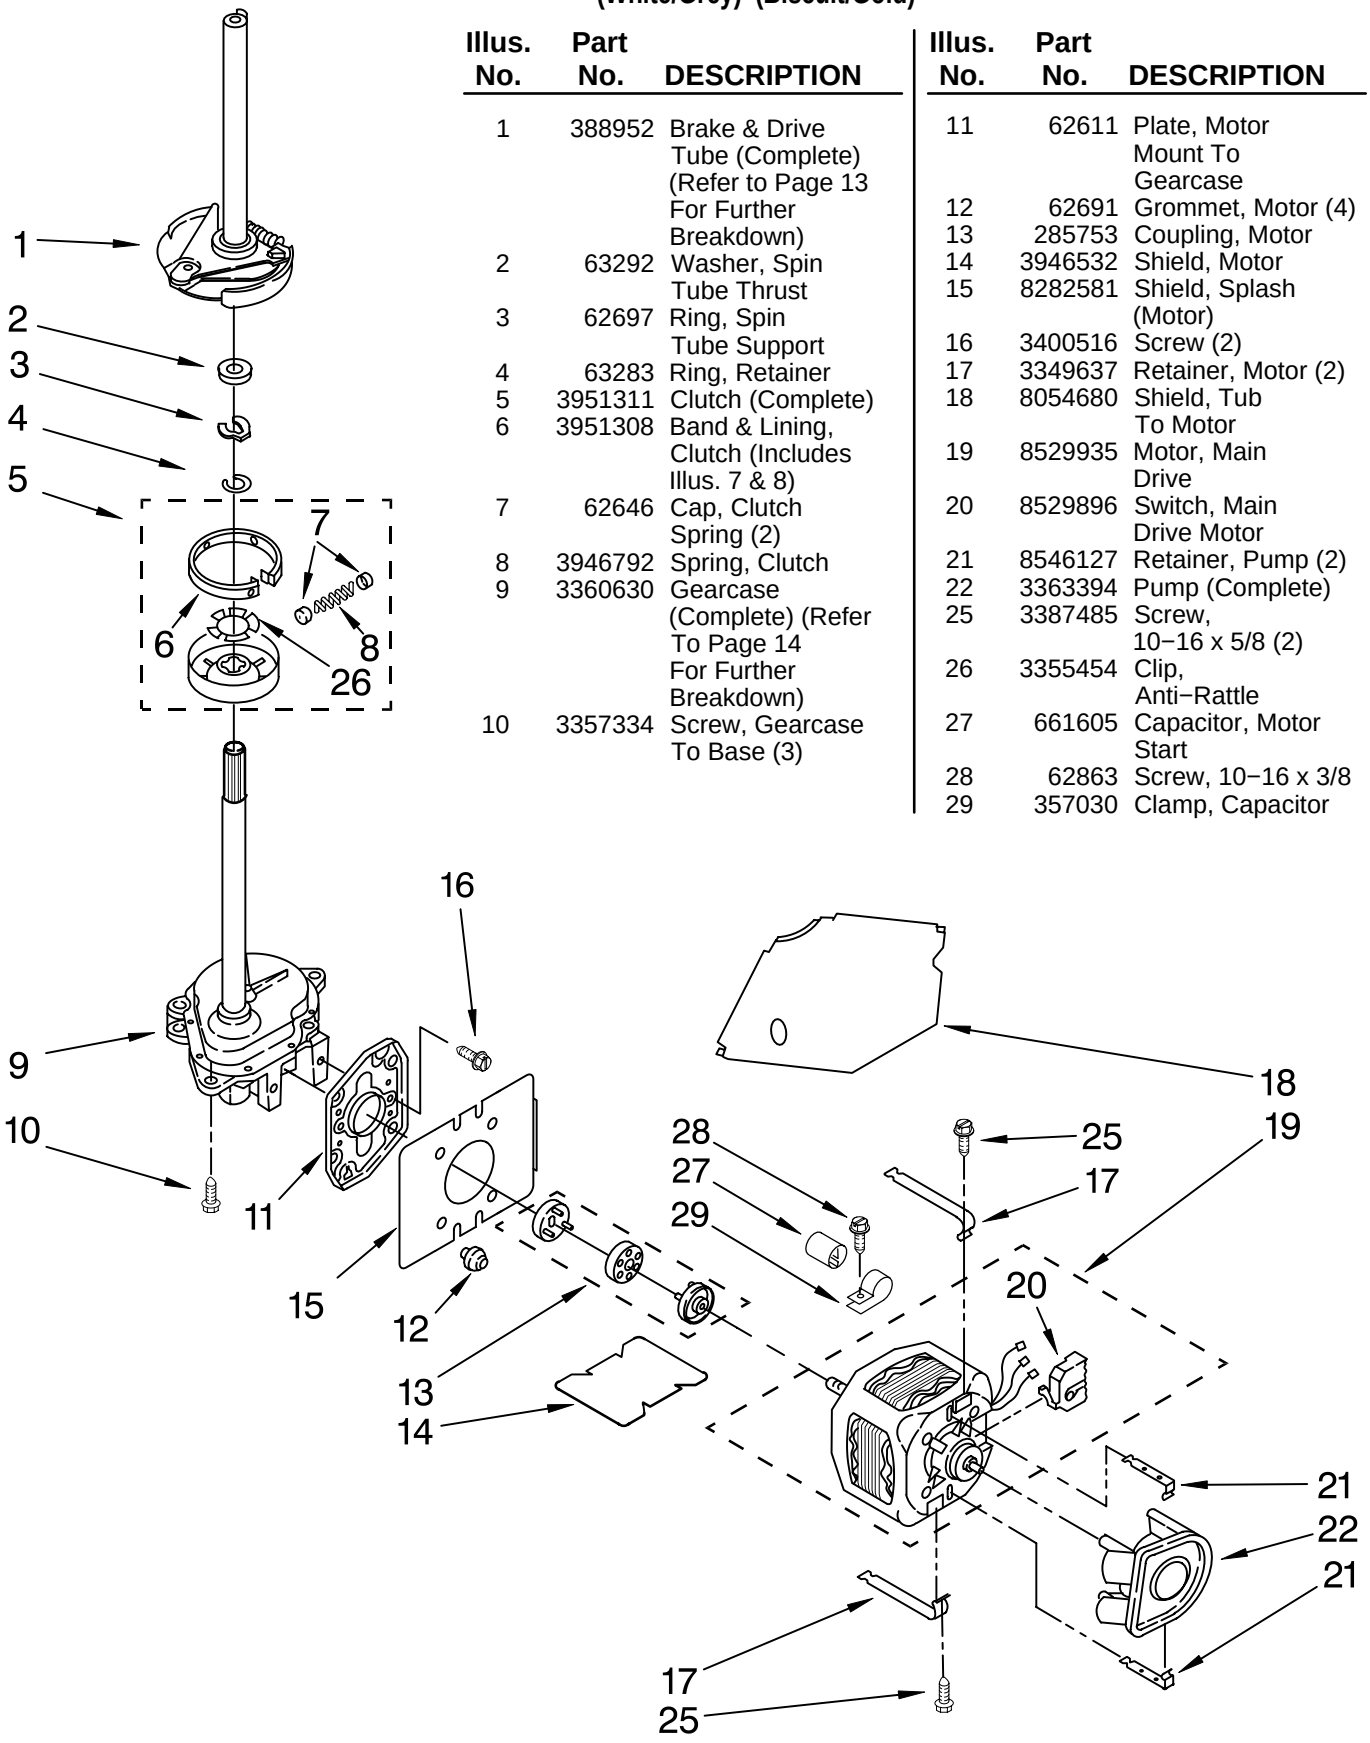

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake & Drive Tube (Complete) (Refer to Page 13 For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3951311	Clutch (Complete)
6	3951308	Band & Lining, Clutch (Includes Illus. 7 & 8)
7	62646	Cap, Clutch Spring (2)
8	3946792	Spring, Clutch
9	3360630	Gearcase (Complete) (Refer To Page 14 For Further Breakdown)
10	3357334	Screw, Gearcase To Base (3)

Illus. No.	Part No.	DESCRIPTION
11	62611	Plate, Motor Mount To Gearcase
12	62691	Grommet, Motor (4)
13	285753	Coupling, Motor
14	3946532	Shield, Motor
15	8282581	Shield, Splash (Motor)
16	3400516	Screw (2)
17	3349637	Retainer, Motor (2)
18	8054680	Shield, Tub To Motor
19	8529935	Motor, Main Drive
20	8529896	Switch, Main Drive Motor
21	8546127	Retainer, Pump (2)
22	3363394	Pump (Complete)
25	3387485	Screw, 10−16 x 5/8 (2)
26	3355454	Clip, Anti−Rattle
27	661605	Capacitor, Motor Start
28	62863	Screw, 10−16 x 3/8
29	357030	Clamp, Capacitor

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MACHINE BASE PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

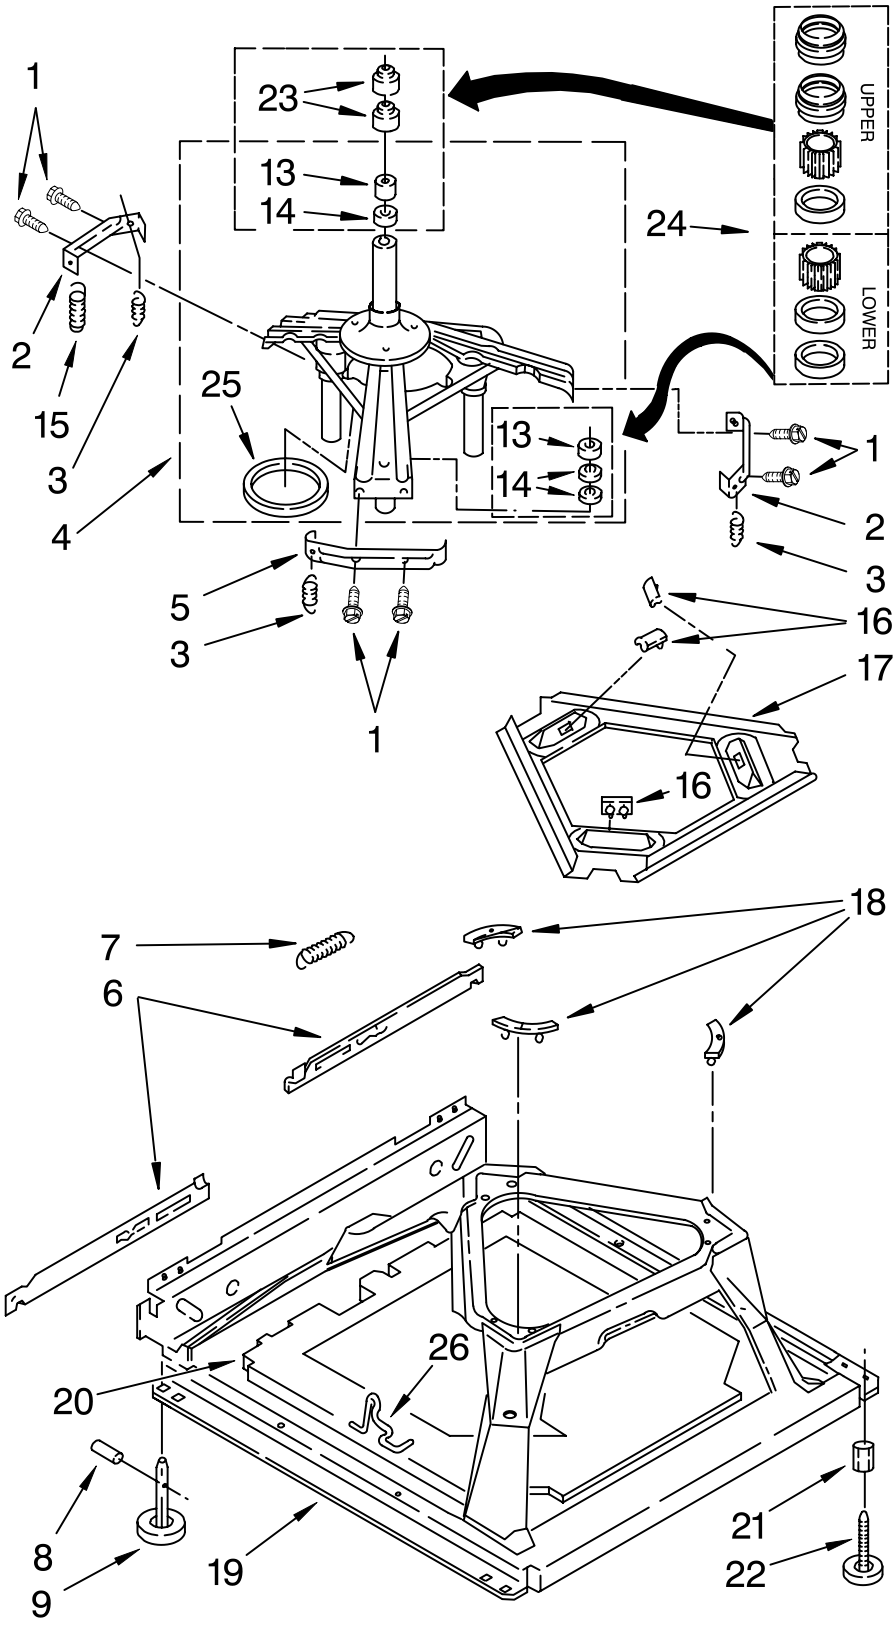

Illus. No.	Part No.	DESCRIPTION
1	3400076	Screw, Bracket Mounting (10−32 x 5/8)
2	8282552	Bracket, Spring Outer (2)
3	63907	Spring, Suspension (3)
4	3362087	Support & Brake, Tub
5	8282550	Bracket, Spring Outer (L.F.)
6	63466	Link, Leveling Mechanism (2)
7	62597	Spring, Leveling Mechanism
8	62837	Pin, Knurled
9	62596	Foot, Rear (2)
13	3347047	Bearing, Centerpost (2)
14	357409	Seal, Centerpost (3)
15	8318050	Spring, Counterweight
16	62568	Pad, Plate
17	3946509	Plate, Suspension
18	3363660	Pad, Base
19	3946512	Base Assembly (Includes Illus. 3, 6, 7, 8, 9, 16, 17, 18 & 26.)
20	8544816	Sound Absorber
21	3359452	Nut, 3/8−16 (2)
22	389102	Foot, Front (2)
23	356934	Seal, Centerpost (2)
24	285203	Centerpost Bearing Kit (Includes Illus. 13, 14 & 23)
25	63134	Ring, Sound Deadening
26	63806	Retainer, Suspension Spring (3)

CONTROL PANEL PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

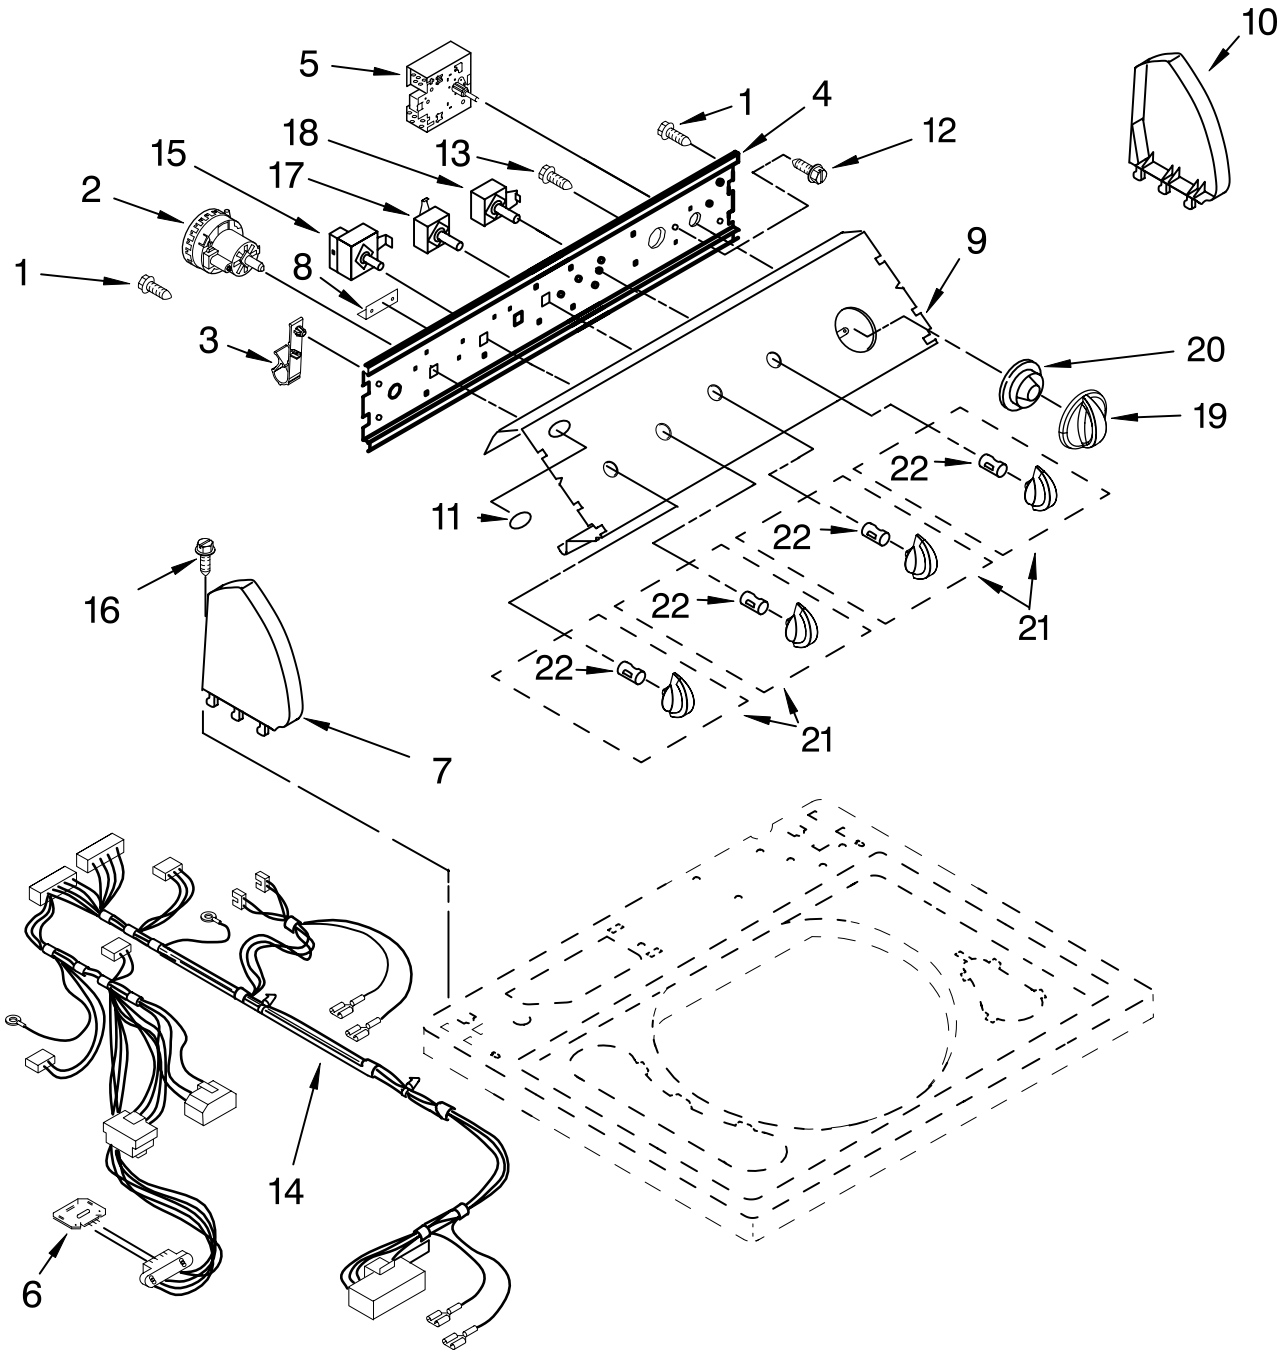

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	90767	Screw, 8−18 x 3/8
2	3366845	Switch, Pressure
3	8317975	Retainer, Harness
4	8544893	Bracket, Control
5	8545379	Timer, Control (60 Hz.) (Motor Not A Service Part)
6	8541388	Control, ATC
7		Cap, End (L.H.)
	8271365	White
	8271368	Biscuit
8	8316039	Shield, ATC
9		Panel, Console (Includes Item 11)
	3956616	Silver
	3955617	Gold
10		Cap, End (R.H.)
	8271359	White
	8271362	Biscuit
11	8533990	Medallion
12	3400818	Screw, Timer Mounting
13	3400073	Screw, Ground
14	3957017	Harness, Wiring (For Detail, See Pages 11 & 12)
15	3956646	Switch, Water Temperature
16	388326	Screw
17	3949188	Switch, Rotary
18	3954573	Switch, Rotary
19		Knob, Timer
	8544945	Silver
	8544946	Biscuit
20		Dial, Timer
	8544947	White
	8544948	Biscuit
21		Knob, Control
	8544937	Silver
	8544938	Biscuit
22	8536939	Clip, Knob

WIRING HARNESS PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

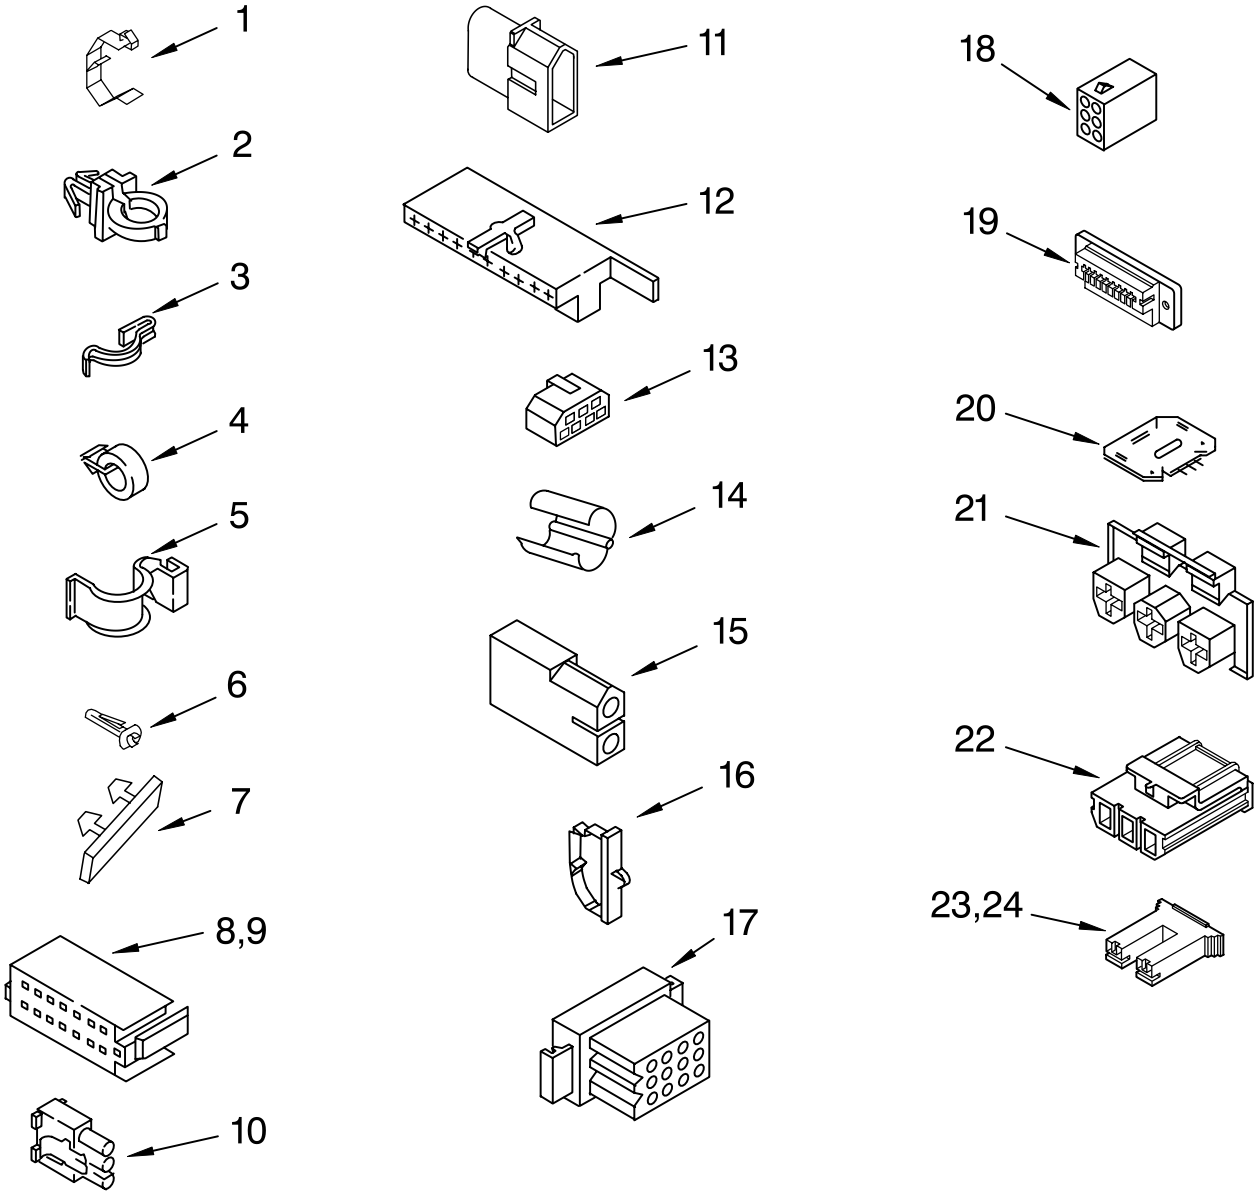

WH2H

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	3349557	Clip, Harness
2	388498	Clip, Harness
3	3347812	Clip, Harness
4	3352501	Clip, Harness
5	90016	Clip, Harness
6	3390496	Clip, Harness
7	389379	Retainer, (Suds Models)
8	3948614	Timer, Block Disconnect (White)
9	352089	Timer, Block Disconnect (Black)
10	62889	Receptacle, Terminal (3−Way) (Lid Switch) (Use Term.94613) Or 94614.)
11	353424	Plug, Terminal (3−Way) (Power Cord) (Use Term.94613)
12	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)
13	3347243	Block, Disconnect (Use Term. 352088)
14	63523	Protector
15	717252	Connector (2−Way) (Use Term.94614)
16	3352944	Clip, Harness
17	3390423	Block, Disconnect (12−Way) (Timer) (Use Term. 94613)
18	3347730	Receptacle (6−Way) (Use Term. 94613)
19	3349494	Connector, Etc
20	3407125	E.T.C. Control
21	3948617	Connector (T.P.A.) (3−Circuit) (Lid Switch)
22	3360056	Connector (T.P.A) (3−Circuit) (Pressure Switch)
23	3354925	Block, Connector (Cold Valve)
24	3354926	Block, Connector (Hot Valve)

FOR COMPLETE WIRING HARNESS REFER TO CONTROL AND REAR PANEL PARTS PAGE

WH2H

BRAKE AND DRIVE TUBE PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

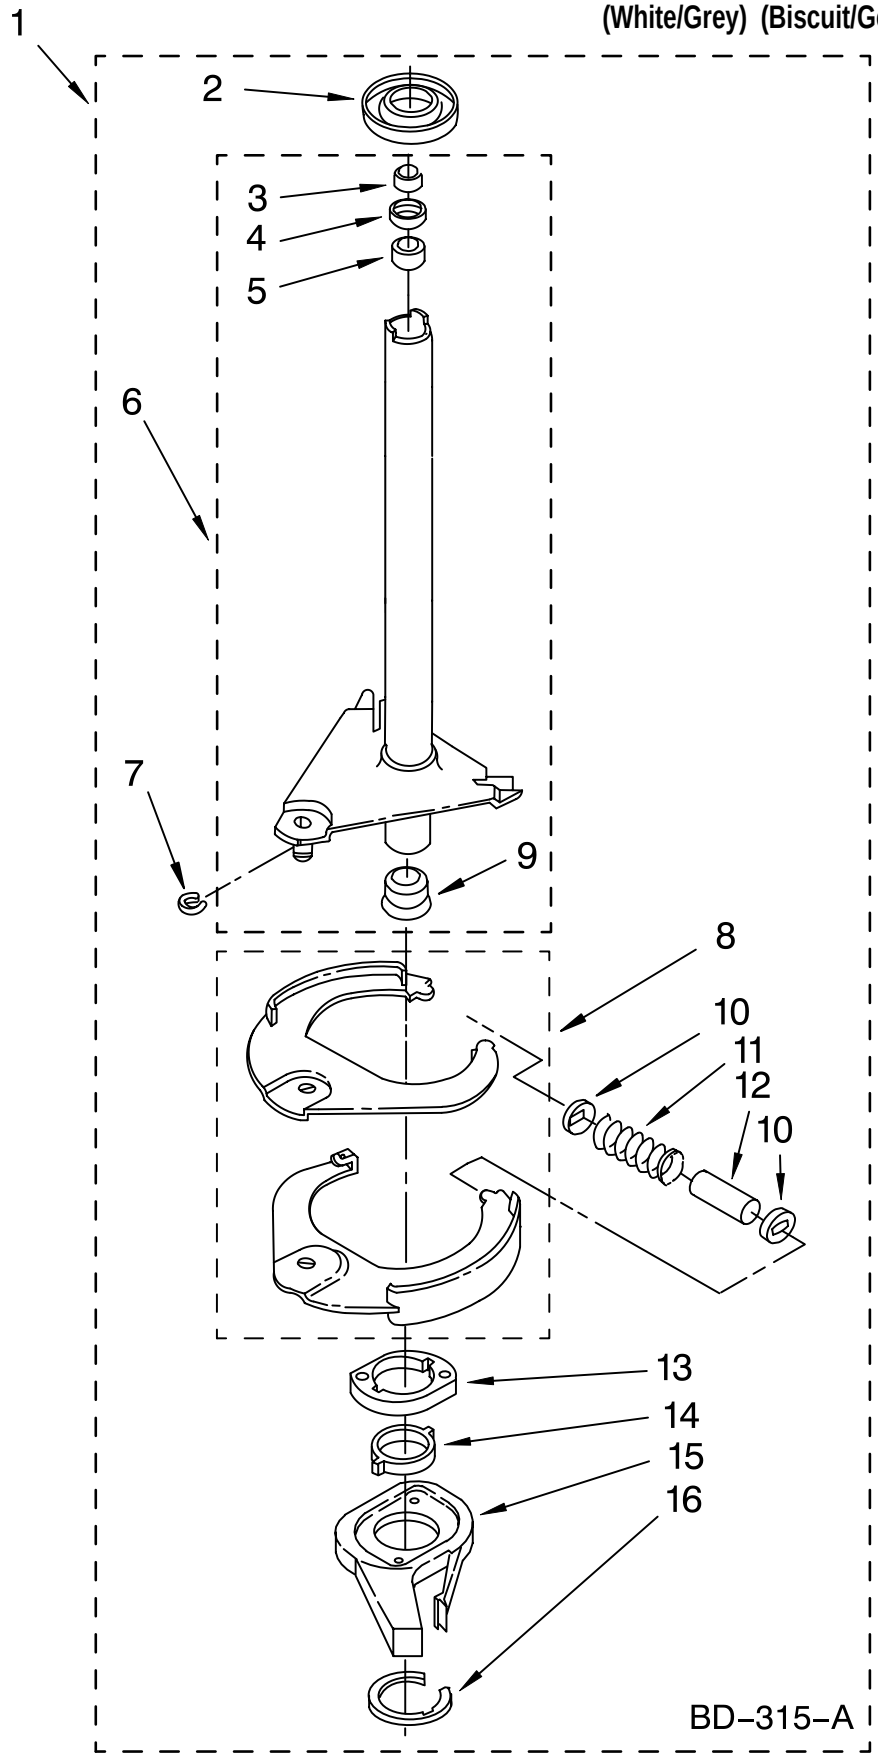

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Shoe, Brake
9	62703	"T" Bearing, Spin Tube
10	62648	Cap, Brake Spring (2)
11	387806	Spring, Brake
12	62909	Sleeve, Brake Spring
13	63023	Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake Cam
16	90368	Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED

285208	Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

GEARCASE PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

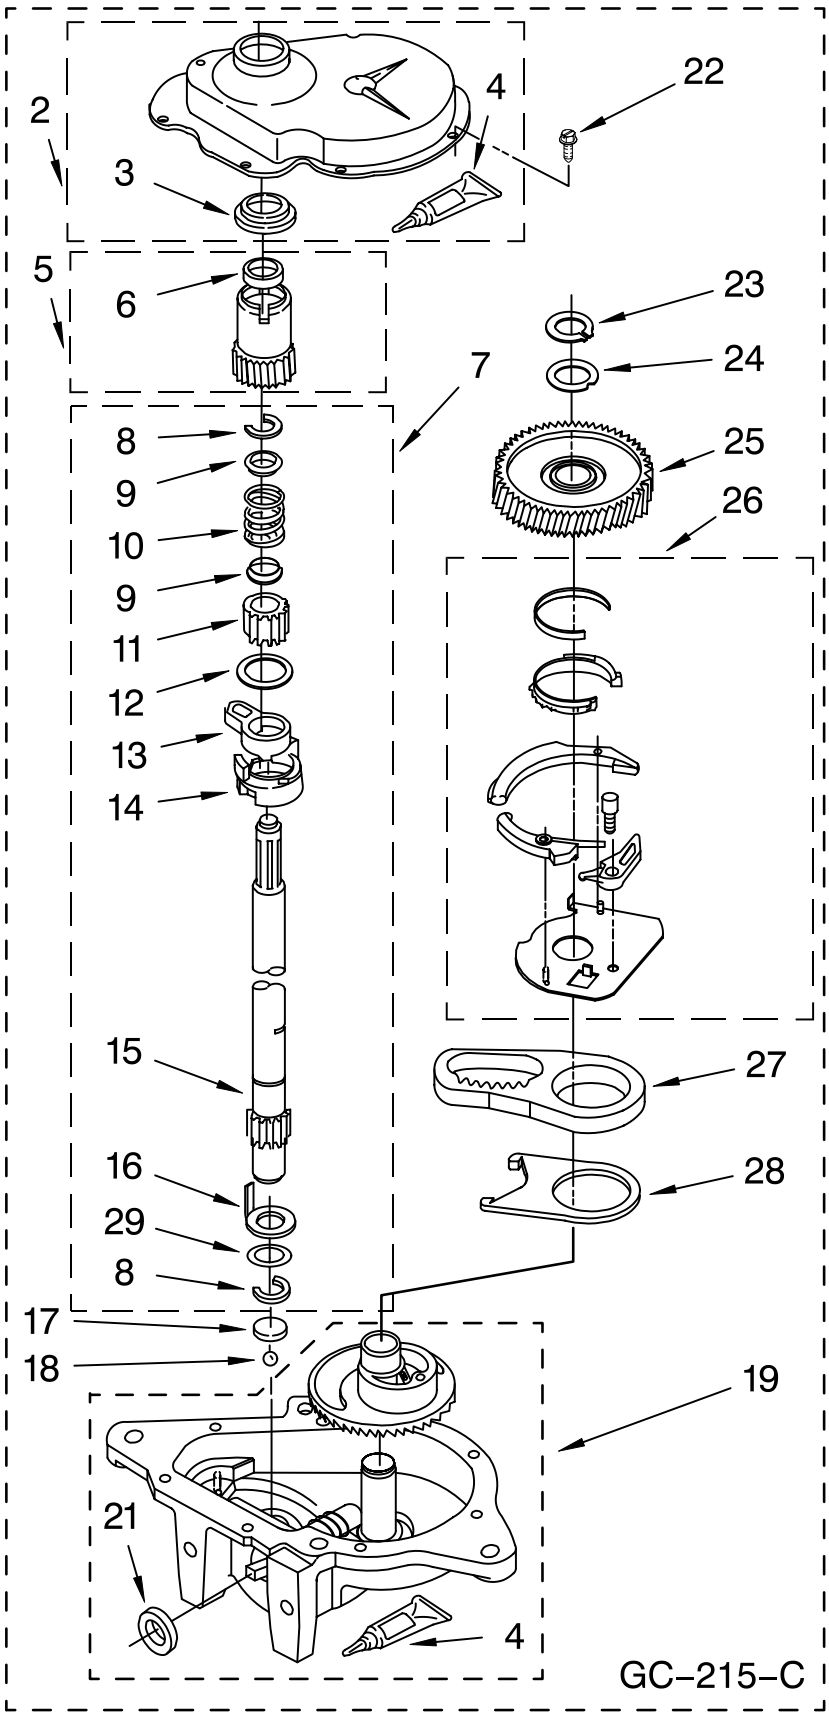

Illus. No.	Part No.	DESCRIPTION
1	3360630	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 and 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 and 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389230	Bottom and Pinion, Gearcase
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover, Mounting (8) (10−24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting
28	62621	Actuator, Shift
29	388815	Washer, Intermediate

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WATER SYSTEM PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

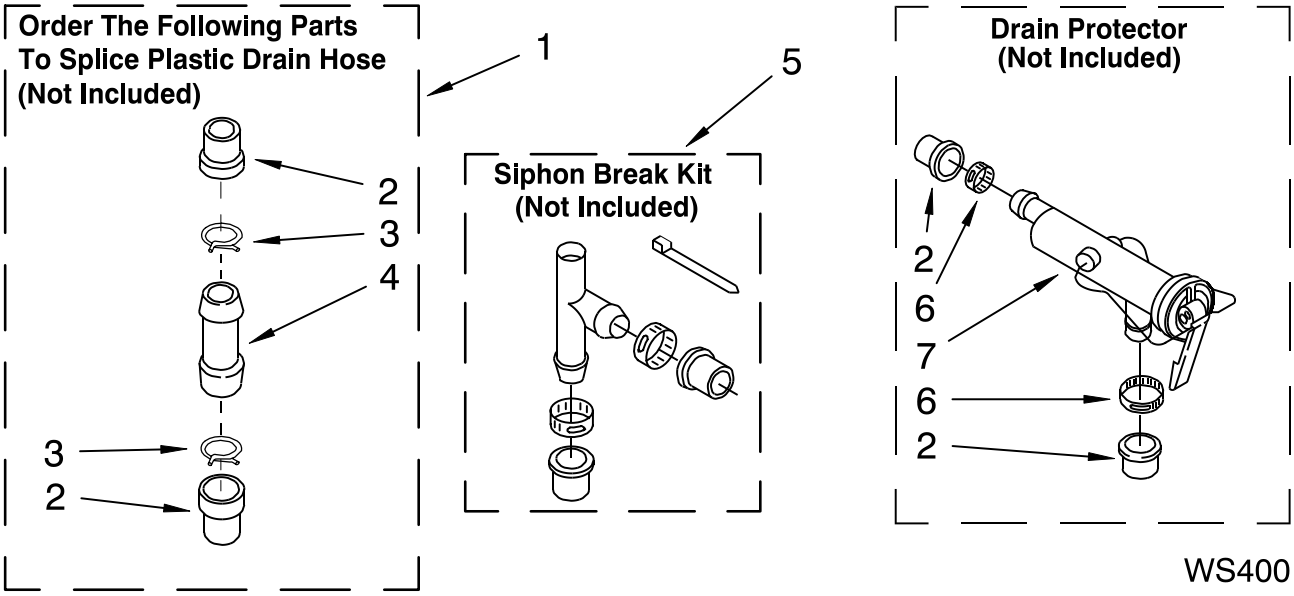

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector (Not Included)

MISCELLANEOUS PARTS

For Models: GSX9750PW0, GSX9750PG0
(White/Grey) (Biscuit/Gold)

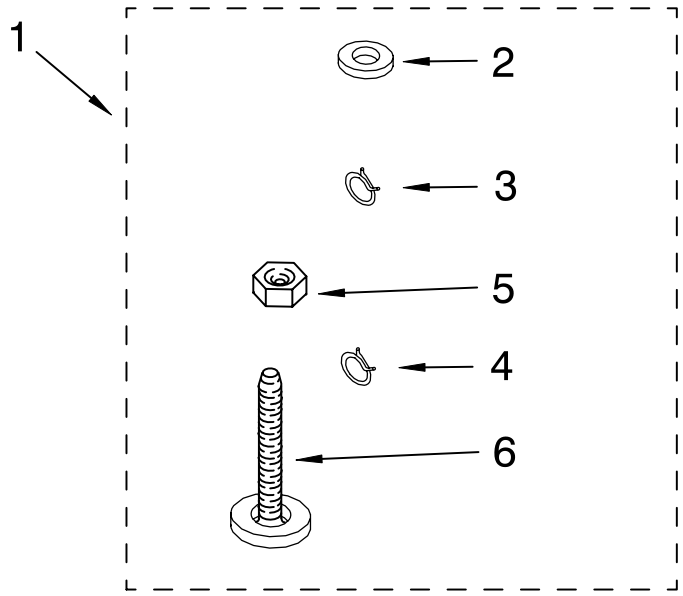

Illus. No.	Part No.	DESCRIPTION
1	3976263	Miscellaneous Parts Bag
2	3976300	Washer, Inlet Hose (4) (1−1/16 x 5/8)
3	3366913	Clamp, Hose
4	3366912	Clamp, Hose
5	3359452	Nut, 3/8−16 (2)
6	389102	Foot, Front (2)

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
PAINT, TOUCH−UP (1/2oz.)		
	72017	White
	4392899	Biscuit
PAINT, PRESSURIZED SPRAY (12 oz.)		
	350938	Primer, Gray
	350930	White
	4392901	Biscuit

Illus. No.	Part No.	DESCRIPTION
PAINT, BULK (1 qt.)		
	799344	White (Uncut)
	4392900	Biscuit (Uncut)
OIL		
	350572	Oil, Gearcase (16 Oz.)
LUBRICANT		
	285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)

Illus. No.	Part No.	DESCRIPTION
SEALER		
	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
COUPLING		
	384496	Coupling, Hose